

AUGUST 1955

PARTS LIST No. 5507-D

**KODAK PONY 135 CAMERA, Model C**  
and  
**Kodak Field Case**



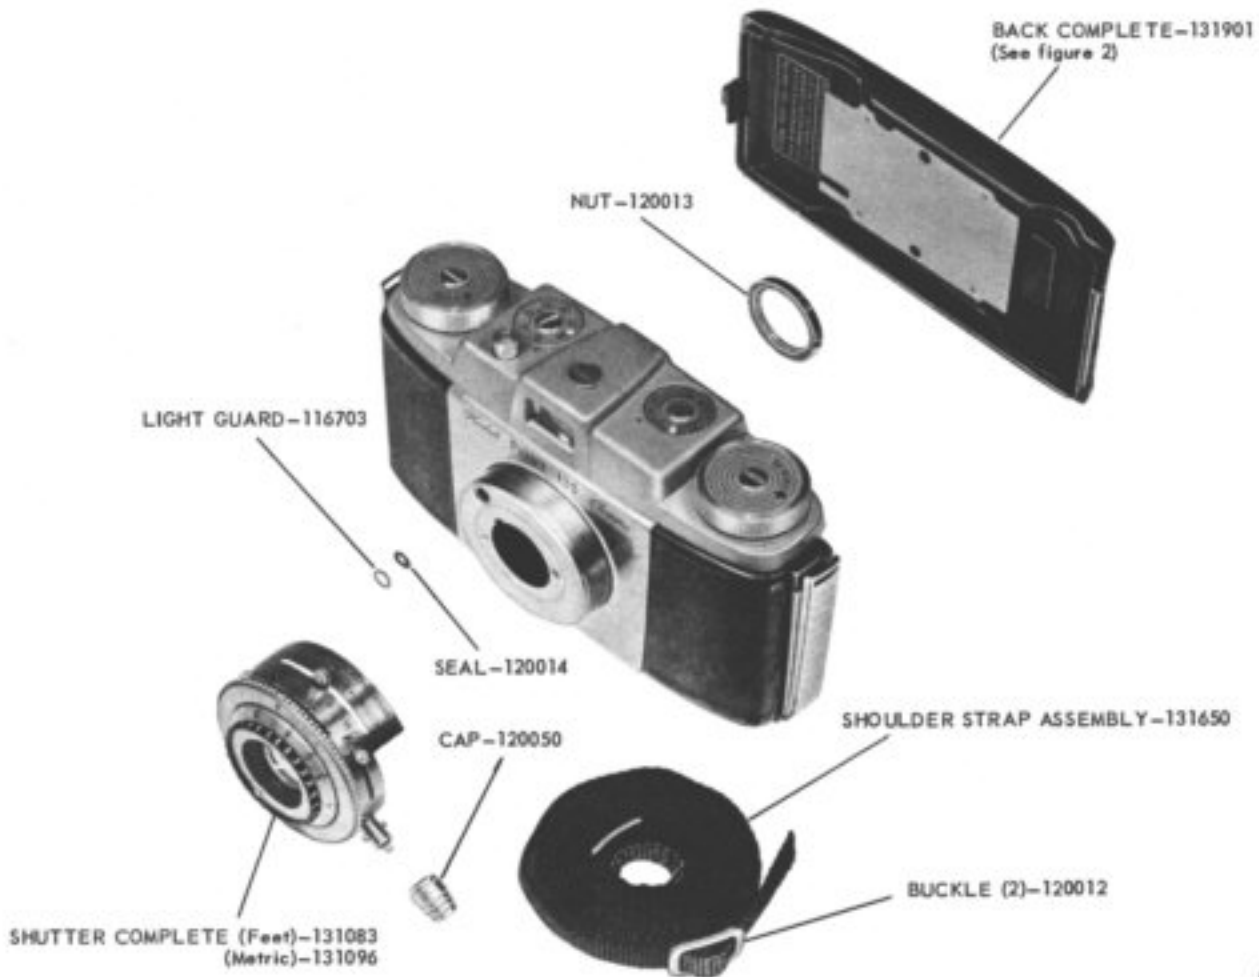 


Figure 1

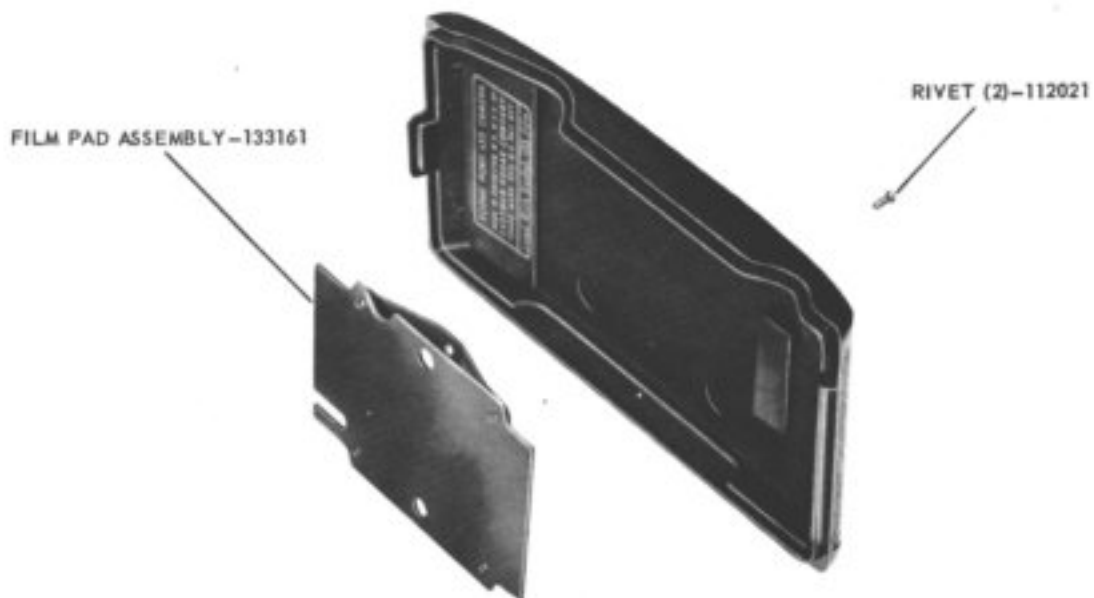
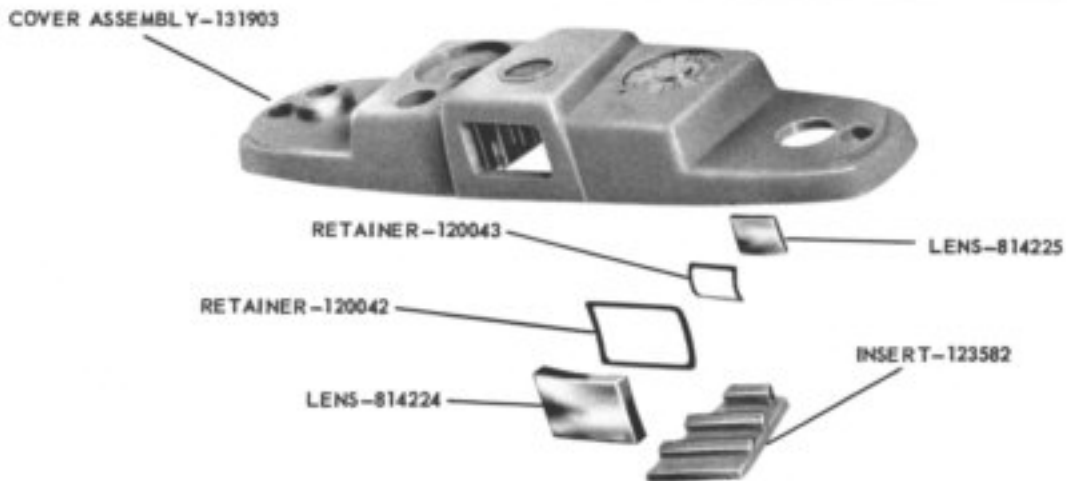 
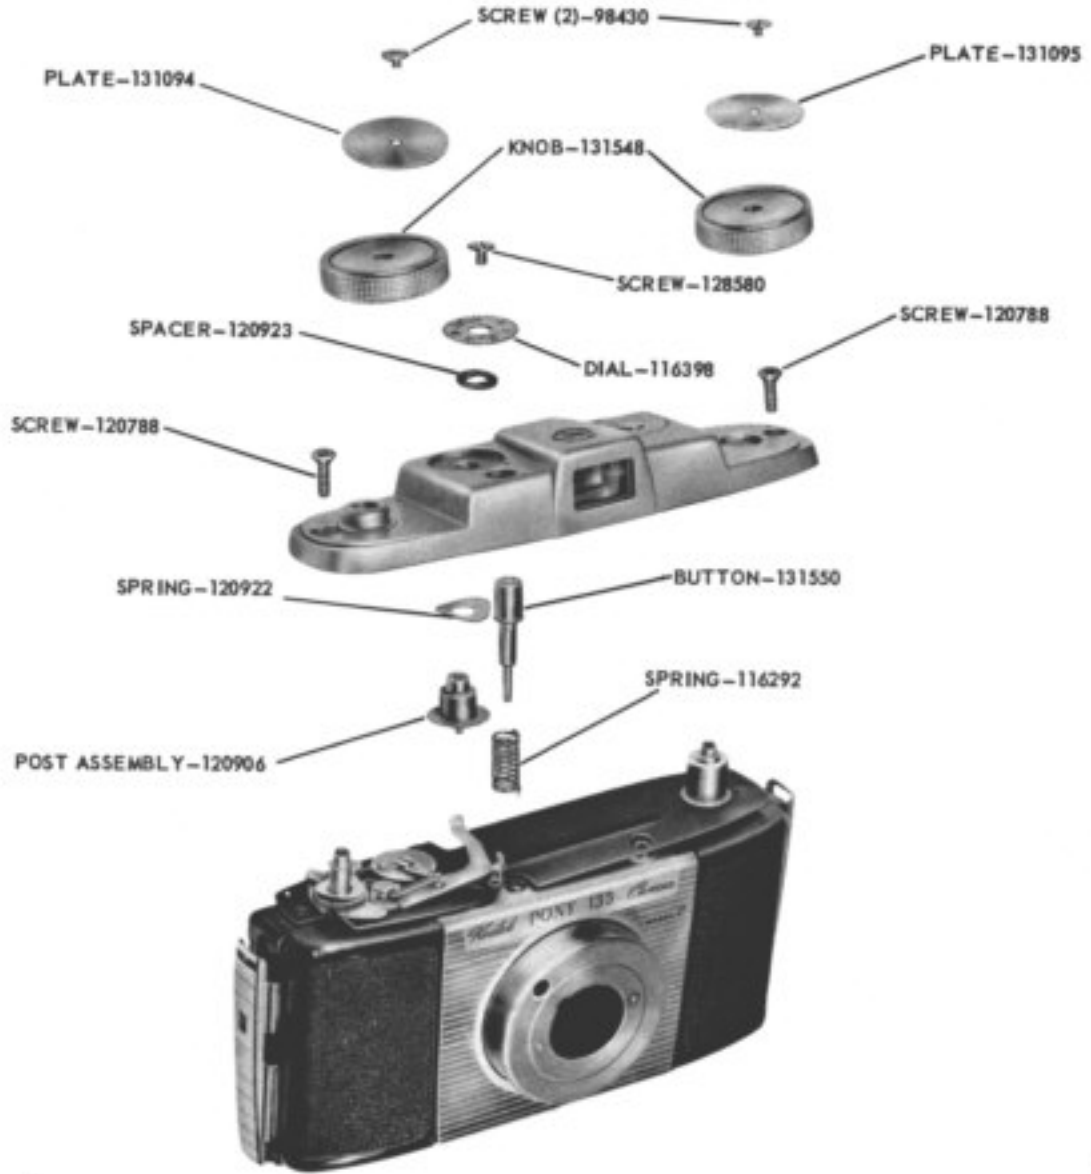 


Figure 2

Always give PART NUMBER and NAME when ordering parts

KODAK PONY 135 CAMERA, MODEL C

 

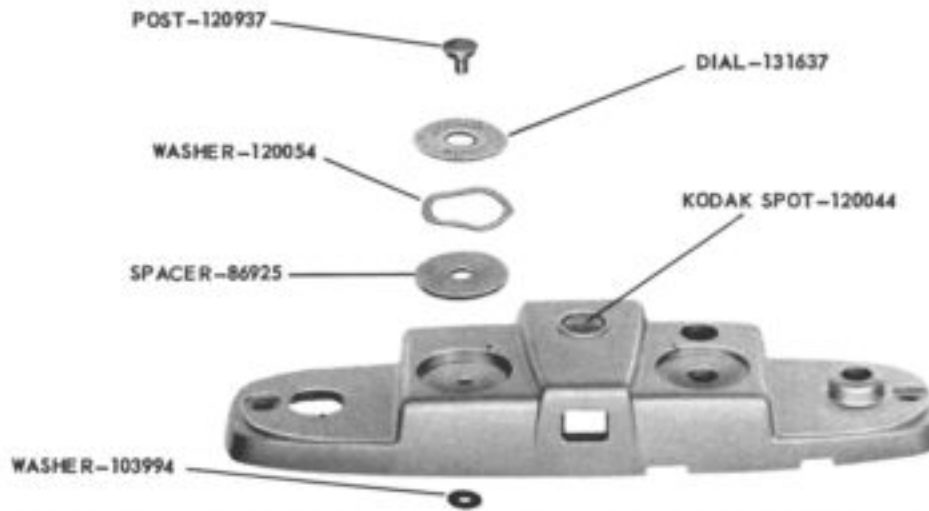 


Figure 5

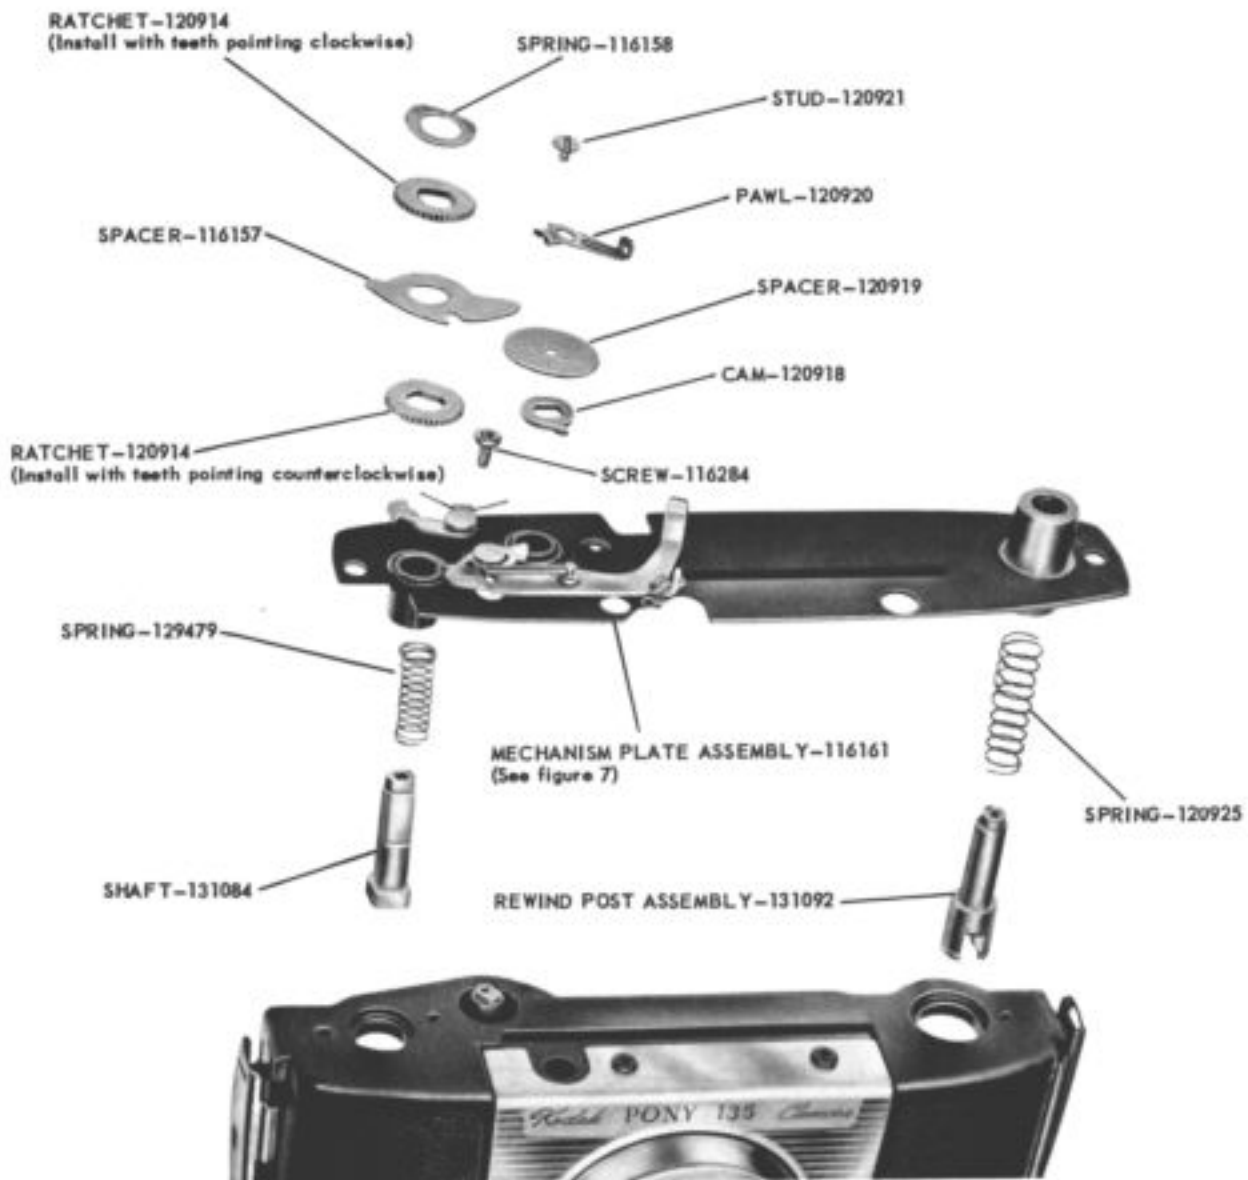 


Figure 6

KODAK PONY 135 CAMERA, MODEL C

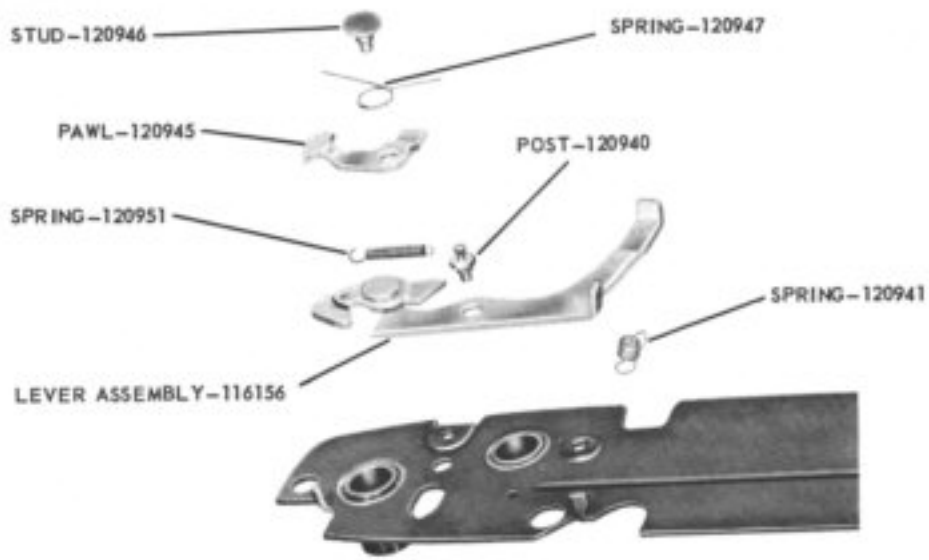 


Figure 7

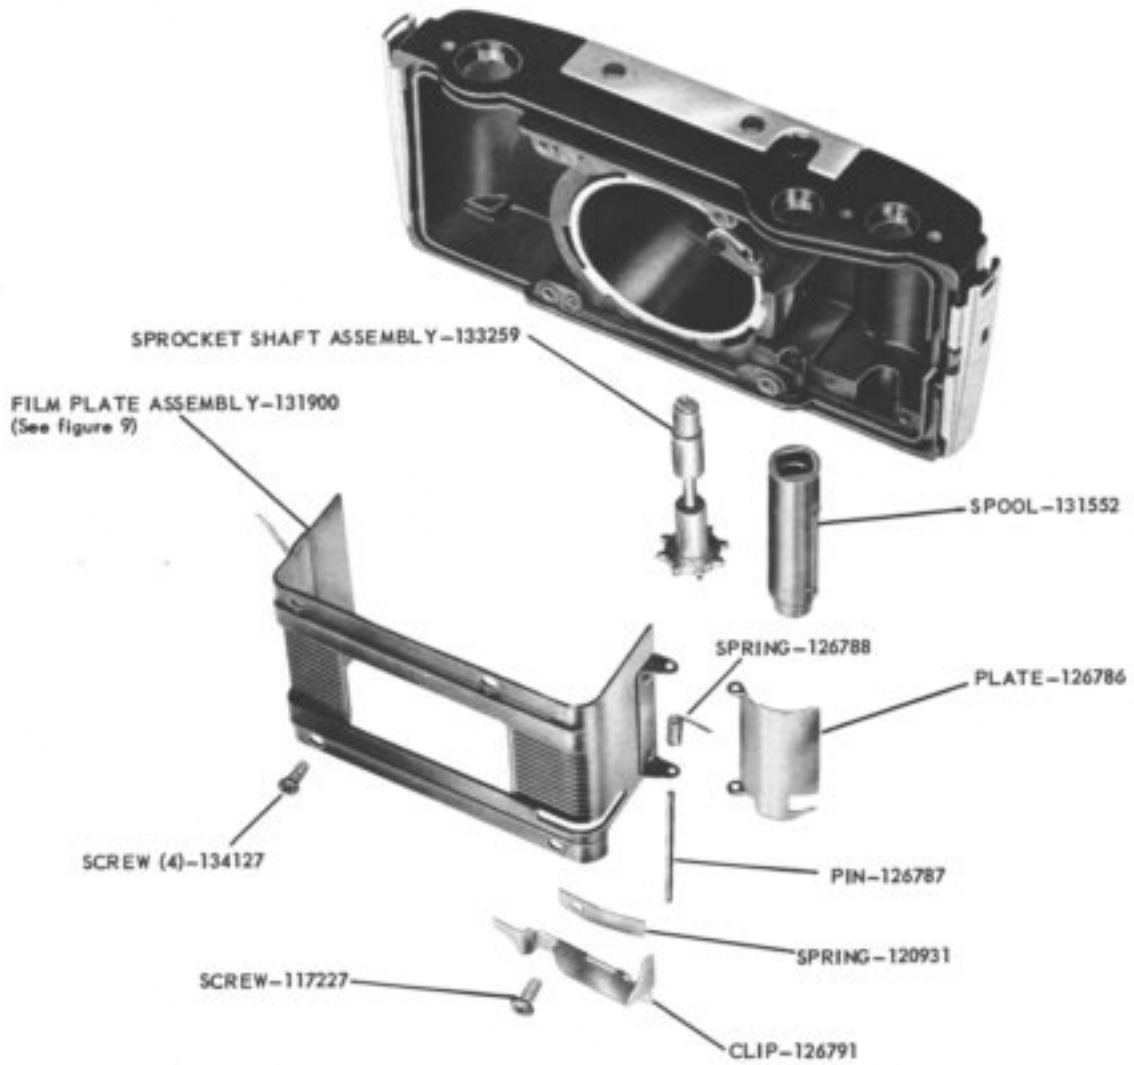 


Figure 8

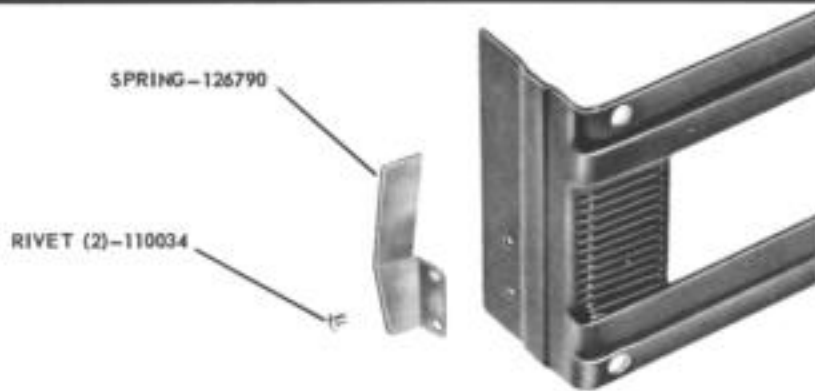 


Figure 9

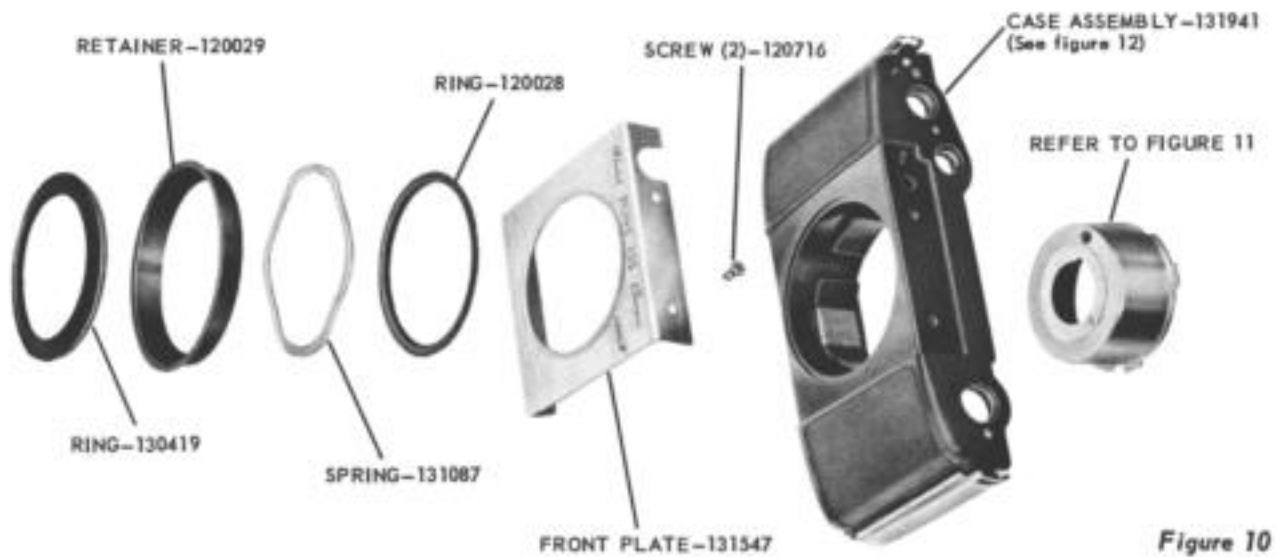 


Figure 10



Figure 11


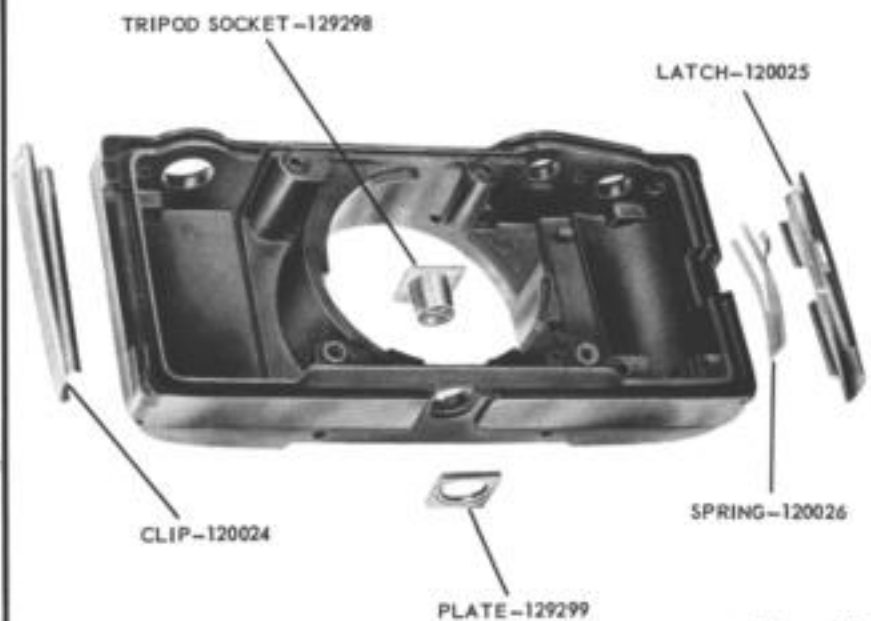 



Figure 12

 KODAK FLASH 300 SHUTTER WITH KODAK ANASTON LENS, 44MM, F/3.5

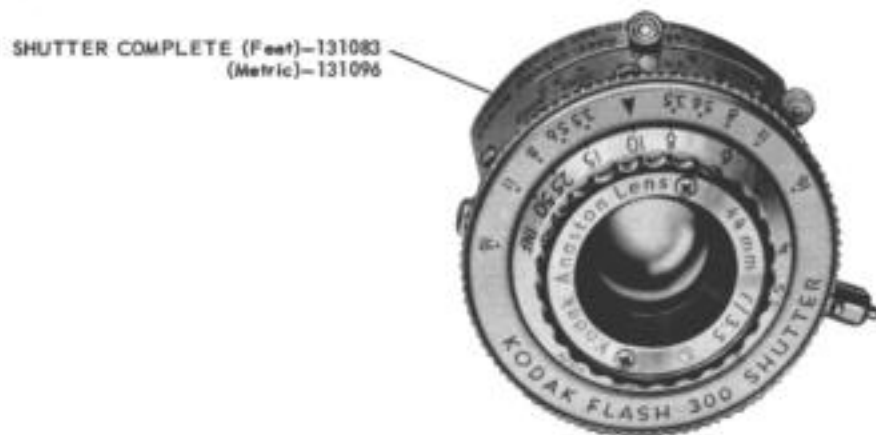

SHUTTER COMPLETE (Feet)—131083  
(Metric)—131096

 Figure 13

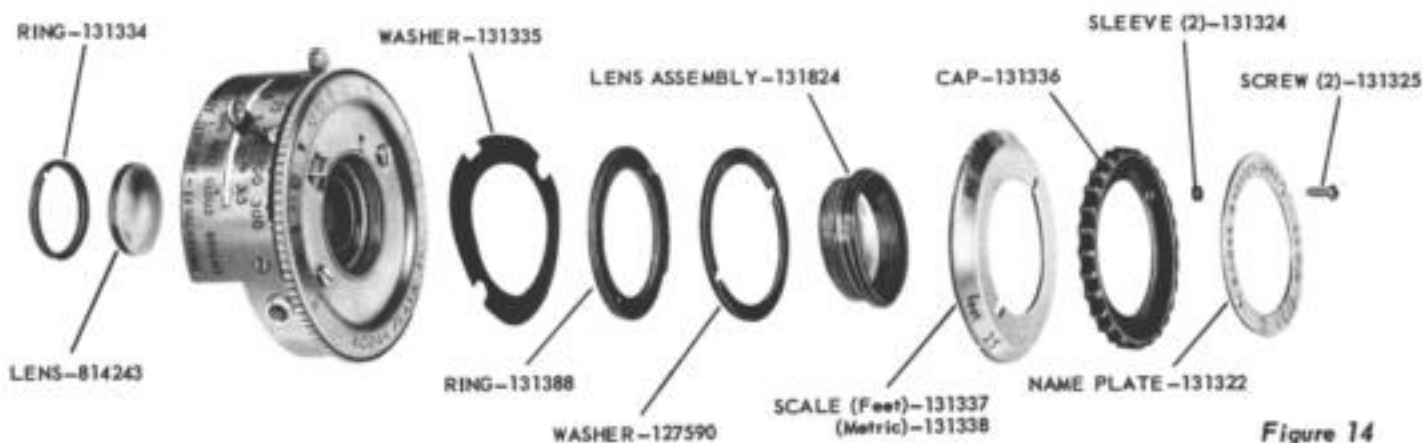


RING—131334  
LENS—814243

WASHER—131335  
RING—131388  
WASHER—127590

LENS ASSEMBLY—131824  
SCALE (Feet)—131337  
(Metric)—131338

CAP—131336  
SLEEVE (2)—131324  
SCREW (2)—131325  
NAME PLATE—131322

 Figure 14

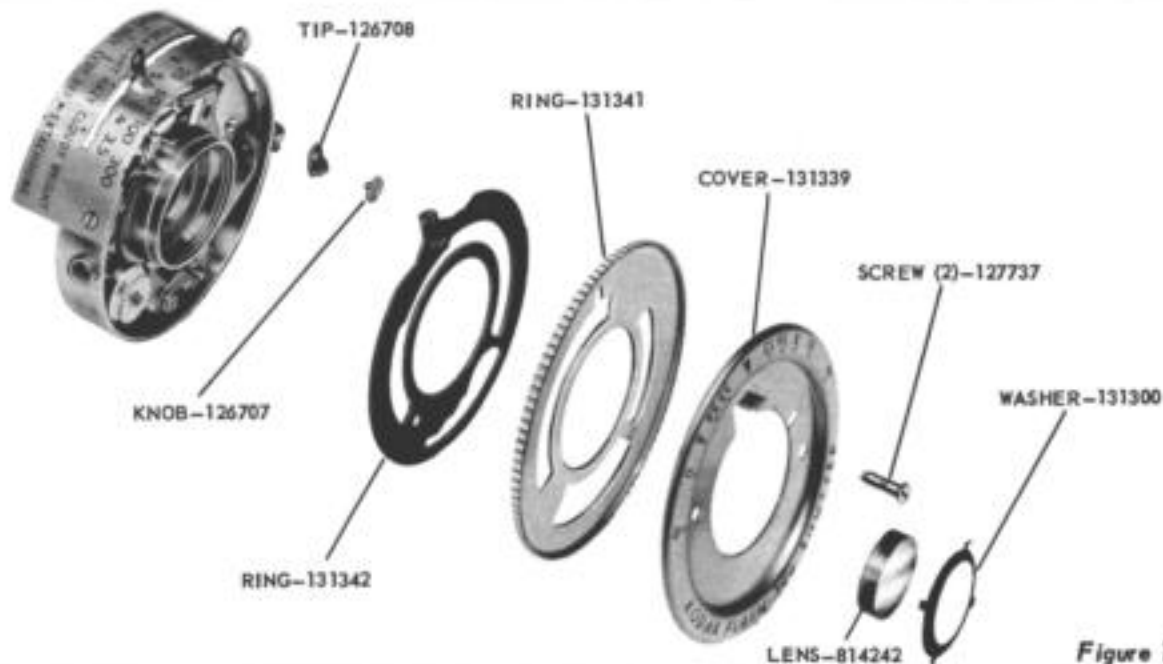

TIP—126708  
KNOB—126707  
RING—131342

RING—131341

COVER—131339  
LENS—814242

SCREW (2)—127737  
WASHER—131300

Figure 15





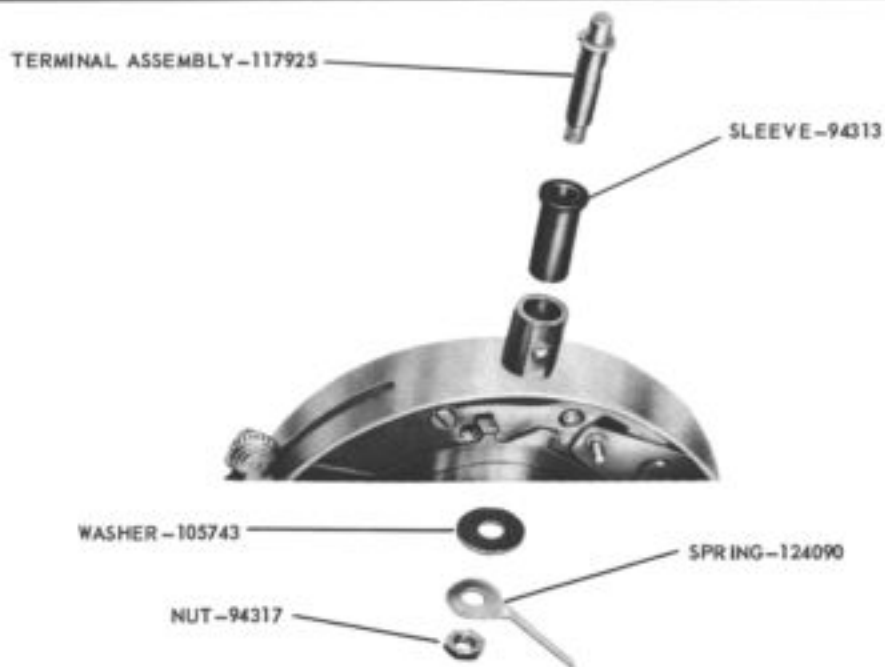 


Figure 18

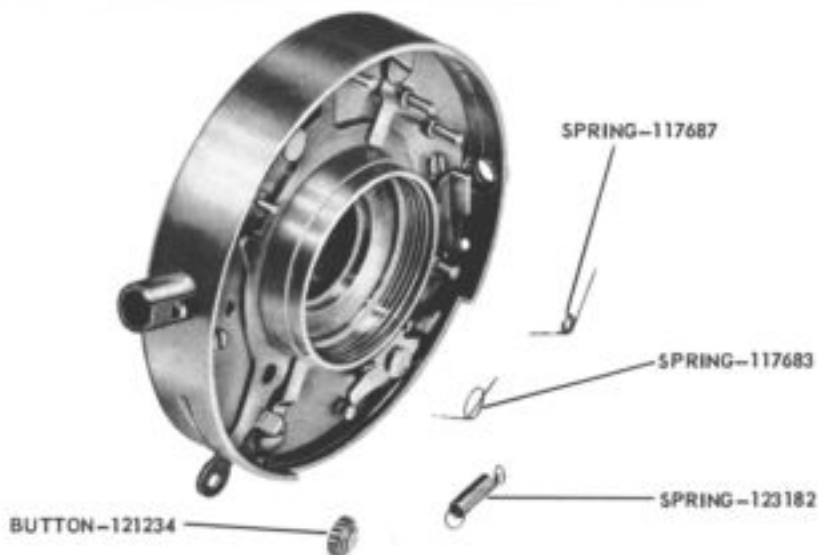 


Figure 19



Figure 20

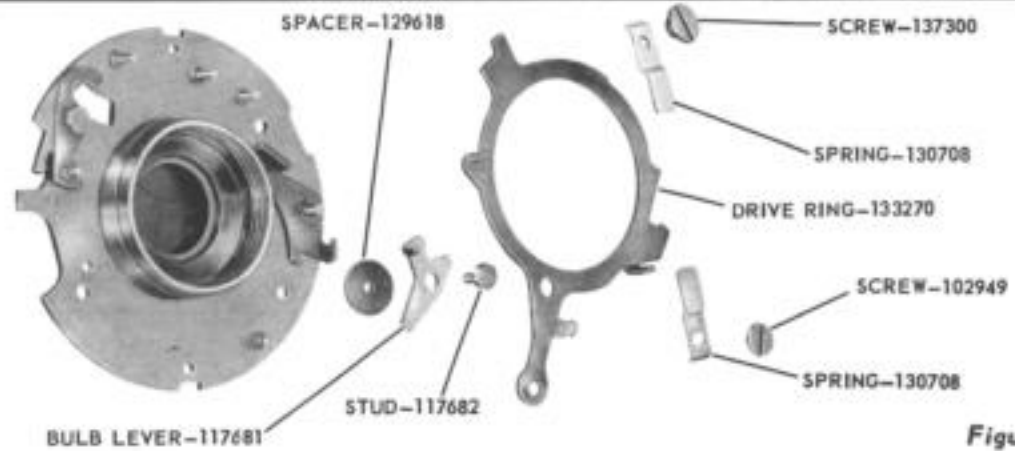 


Figure 21



Figure 22

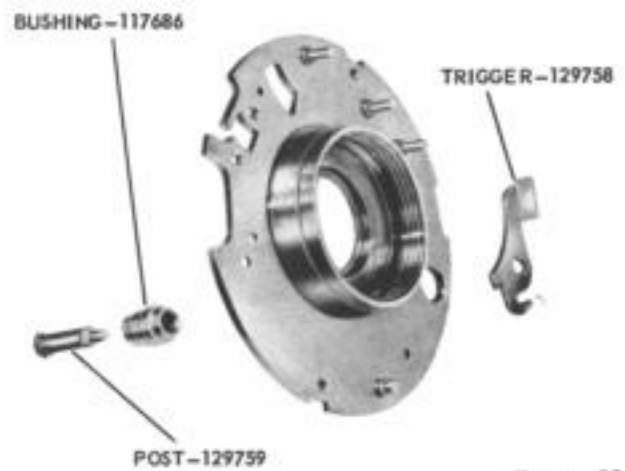 


Figure 23

KODAK FIELD CASE

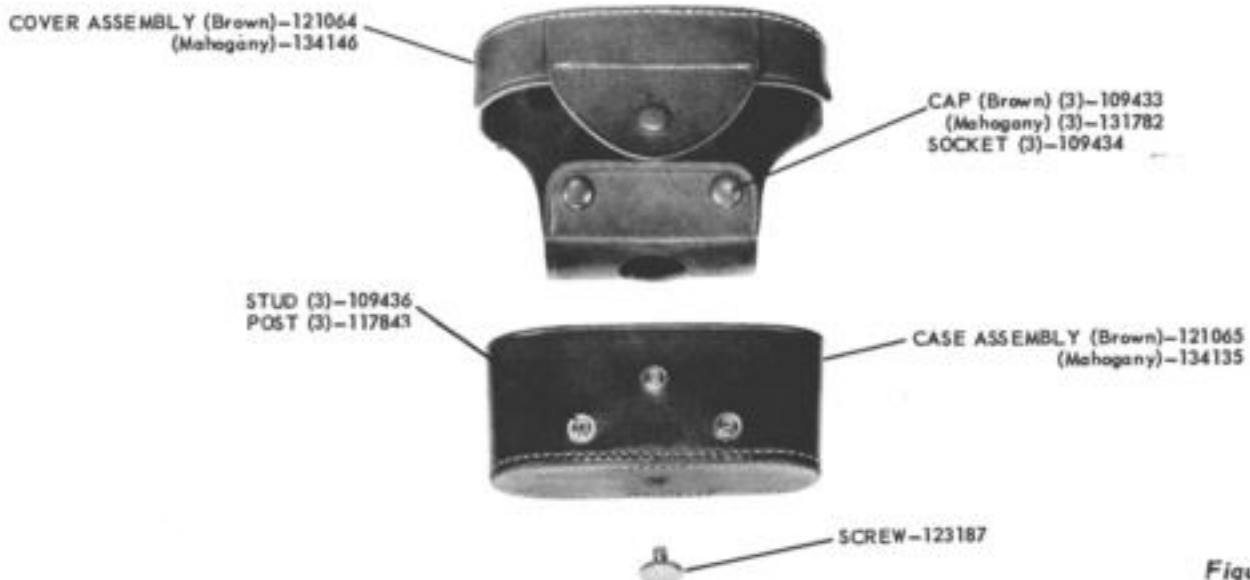 


Figure 24

SERVICE TOOLS

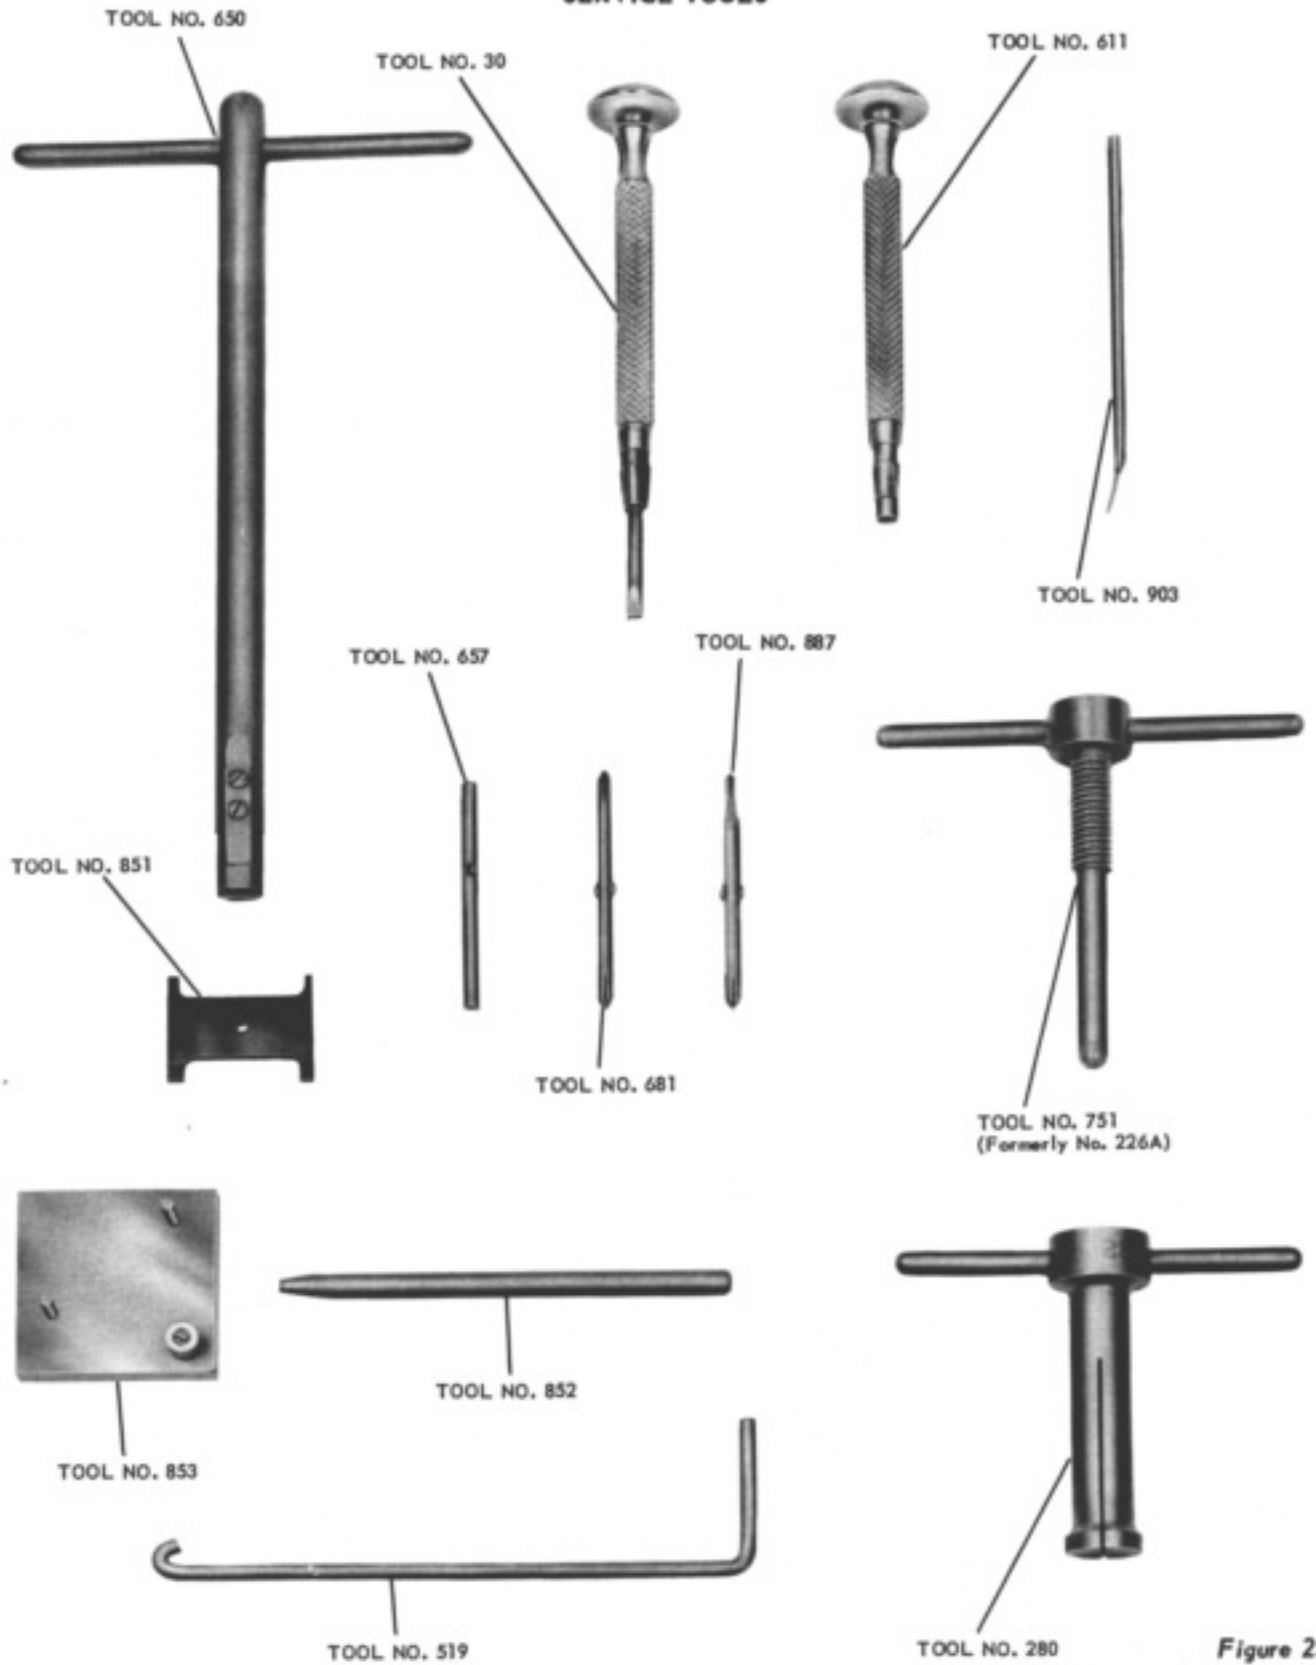 


Figure 25